

TOSHIBA



Microwave Oven

INSTRUCTION MANUAL

Model:

MV-AM20T(BK)

Read these instructions carefully before using your microwave oven, and keep it carefully.

If you follow the instructions, your oven will provide you with many years of good service.

SAVE THESE INSTRUCTIONS CAREFULLY

Welcome to the world of **TOSHIBA**

BEFORE OPERATING THIS PRODUCT,
READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE

CONTENTS

**PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE
MICROWAVE ENERGY**

IMPORTANT SAFETY INSTRUCTIONS

GROUNDING INSTRUCTIONS

UTENSILS

SETTING UP YOUR OVEN

OPERATION

TROUBLE SHOOTING

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY



(a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.

(b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

(c) WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

Specifications

Model:	MV-AM20T (BK)
Rated Voltage:	240V~50Hz
Rated Input Power(Microwave):	1250-1320W
Rated Output Power(Microwave):	800W
Rated Input Power(Grill):	1000W
Oven Capacity:	20L
Turntable Diameter:	Ø255mm
External Dimensions:	462x381x282mm
Net Weight:	Approx. 12.59kg

IMPORTANT SAFETY INSTRUCTIONS WARNING



To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Children less than 8 years of age shall be kept away unless continuously supervised.
3. Keep the appliance and its cord out of reach of children less than 8 years.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. (For appliance with type Y attachment)
5. **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

IMPORTANT SAFETY INSTRUCTIONS WARNING



6. WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
7. WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
9. Only use utensils that are suitable for use in microwave ovens.
10. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
11. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
12. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
13. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
14. The oven should be cleaned regularly and any food deposits removed.
15. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

IMPORTANT SAFETY INSTRUCTIONS WARNING



16. The appliance must not be installed behind a decorative door in order to avoid overheating. (This is not applicable for appliances with decorative door.)
17. Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)
18. The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.
19. The microwave oven must be operated with the decorative door open. (for ovens with a decorative door.)
20. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - farm houses;
 - bed and breakfast type environments.
21. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
22. Metallic containers for food and beverages are not allowed during microwave cooking.
23. The appliance shall not be cleaned with a steam cleaner.
24. The appliance is intended to be used freestanding.
25. The rear surface of appliances shall be placed against a wall.

IMPORTANT SAFETY INSTRUCTIONS WARNING



26. The appliances are not intended to be operated by means of an external timer or separate remote-control system.

27. The temperature of accessible surfaces may be high when the appliance is operating.

28. WARNING: When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

**READ CAREFULLY AND KEEP FOR FUTURE
REFERENCE**

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION



DANGER

Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION



1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
 - 1)The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2)The extension cord must be a grounding-type 3-wire cord.
 - 3)The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION



UTENSILS

CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

MATERIALS TO BE AVOIDED IN MICROWAVE OVEN


UTENSILS	REMARKS
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

SETTING UP YOUR OVEN


NAMES OF OVEN PARTS AND ACCESSORIES

Remove the oven and all materials from the carton and oven cavity. Your oven comes with the following accessories:

Glass tray 1
Turntable ring assembly 1
Instruction Manual 1

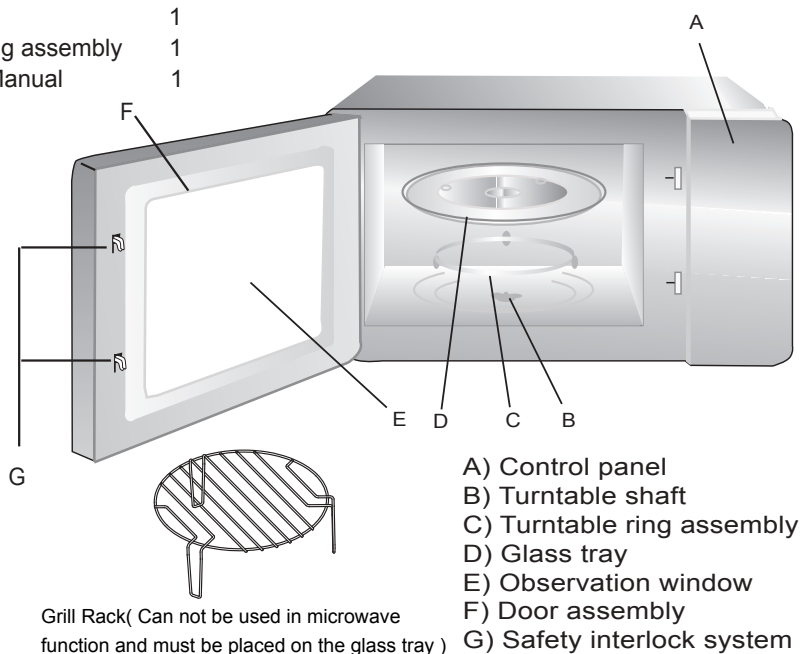

Turntable Installation

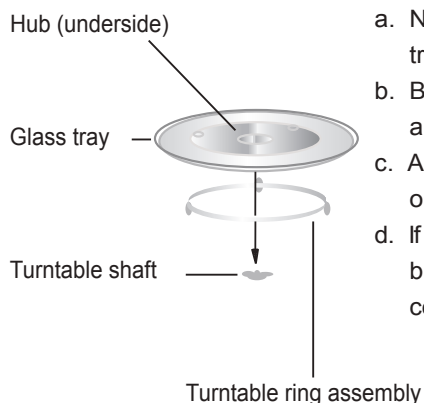

- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

SETTING UP YOUR OVEN


COUNTERTOP INSTALLATION

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. DO not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

Installation

1. Select a level surface that provide enough open space for the intake and/or outlet vents.

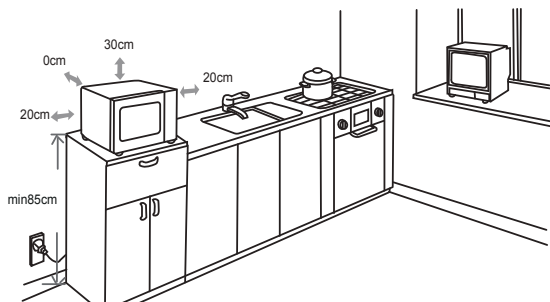

- (1) The minimum installation height is 85cm.
- (2) The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 30cm above the oven, a minimum clearance of 20cm is required between the oven and any adjacent walls.
- (3) Do not remove the legs from the bottom of the oven.
- (4) Blocking the intake and/ or outlet openings can damage the oven.
- (5) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.

SETTING UP YOUR OVEN

INSTALLATION

2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

WARNING

Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.





The accessible surface may
be hot during operation

OPERATION INSTRUCTIONS

1. Clock Setting



When the microwave oven is electrified, the screen will display "0:00", buzzer will ring once.

- 1) Press "**CLOCK/KITCHEN TIMER**" twice to select clock function, the hour figures will flash.
- 2) Turn " " to adjust the hour figures, the input time should be within 0--23.
- 3) Press "**START/+30SEC.**", the minute figures will flash.
- 4) Turn " " to adjust the minute figures, the input time should be within 0--59.
- 5) Press "**START/+30SEC.**" to finish clock setting. ":" will flash, and the time will light.
- 6) If need to reset the clock, please repeat the step1 to step 5.



Note: 1) If the clock is not set, it would not function when powered.

2) During the process of clock setting, if you press "**STOP/CANCEL**" or if there is no operation in 1minute, the oven will go back to the previous status automatically.

2. Microwave Cooking

Press "**MICROWAVE**" once, the screen will display "800w" and "00:00" is light. Press "**MICROWAVE**" repeatedly or turn " " to choose the power you want, and "800w", "600w", "400w", "200w", "100w" will display for each added press. Then press "**START/+30SEC.**" to confirm, and turn " " to set cooking time from 0:05 to 95:00. Press "**START/+30SEC.**" again to start cooking.

Example: If you want to use 600W microwave power to cook for 20 minutes, you can operate the oven as the following steps.

- 1) Press "**MICROWAVE**" once, the screen displays "800w".
- 2) Press "**MICROWAVE**" once again or turn " " to choose 600W microwave power.
- 3) Press "**START/+30SEC.**" to confirm, and the screen displays "600w".
- 4) Turn " " to adjust the cooking time until the oven displays "20:00".
- 5) Press "**START/+30SEC.**" to start cooking.



OPERATION INSTRUCTIONS

Note: the step quantities for the adjustment time of the coding switch are as follow:



- 0---1 min : 5 seconds
- 1---5 min : 10 seconds
- 5---10 min : 30 seconds
- 10---30 min : 1 min ute
- 30---95 min : 5 minutes

" MICROWAVE " Pad instructions		
Order	Display	Microwave Power
1	800w	100%
2	600w	80%
3	400w	50%
4	200w	30%
5	100w	10%

3. Grill or Combi. Cooking

Press "**GRILL/COMBI**" once, the screen will display "G". Press "**GRILL/COMBI**" repeatedly or turn "" to choose the power you want, and "G", "C-1". "C-2" will display for each added press. Then press "**START/+30SEC.**" to confirm, and turn "" to set cooking time from 0:05 to 95:00. Press "**START/+30SEC.**" again to start cooking.

Example: If you want to use 55% microwave power and 45% grill power(C-1) to cook for 10 minutes, you can operate the oven as the following steps.



- 1) Press "**GRILL/COMBI**" once, the screen displays "G".
- 2) Press "**GRILL/COMBI**" for times or turn "" to choose combi. 1 mode.
- 3) Press "**START/+30SEC.**" to confirm, and the screen displays "C-1".
- 4) Turn "" to adjust the cooking time until the oven displays "10:00".
- 5) Press "**START/+30SEC.**" to start cooking.

OPERATION INSTRUCTIONS


"GRILL/COMBI" Pad instructions

Order	Display	Microwave Power	Grill Power
1	G	0%	100%
2	C-1	55%	45%
3	C-2	36%	64%


4. Quick Start

- 1) In multi-stage cooking state, each press of " **START/+30SEC.** " can increase 30 seconds cooking time. Defrosting stage cannot increase time.
- 2) In microwave, grill, combination cooking or time defrost state, each press of " **START/+30SEC.** " can increase 30 seconds of cooking time.
- 3) In waiting state, turn "  " left to set cooking time with 100% microwave power, "800w" is light, and "00:00" will flash. Then turn "  " left or right to set cooking time (or press " **START/+30SEC.** " to set 30 seconds of cooking time and the oven start cooking automatically). After choosing the cooking time, press " **START/+30SEC.** " to start cooking.

5. Defrost By Weight


- 1) Press " **DEFROST** " once, and "100" will flash to remind you input the defrost weight.
- 2) Turn "  " to select the weight of food from 100 to 1500 g.
- 3) Press " **START/+30SEC.** " to start defrosting.

6. Defrost By Time

- 1) Press " **DEFROST** " twice, and the oven will display the defrost power "240w" and "00:00" will flash to remind you input the defrost time.
- 2) Turn "  " to select the defrost time. The MAX time is 95 minutes.
- 3) Press " **START/+30SEC.** " to start defrosting. The defrost power cannot be changed.

OPERATION INSTRUCTIONS



7. Kitchen Timer

- 1) Press "**CLOCK/KITCHEN TIMER**" once, the screen will display 00:00.
- 2) Turn " " to enter the correct time. (The maximum cooking time is 95 minutes.)
- 3) Press "**START/+30SEC.**" to confirm setting.
- 4) When the kitchen time is reached, the buzzer will ring 5 times and "End" will display on the screen.



Note: 1) The inquiry of current time cannot work when the kitchen timer is working.

- 2) During the working of kitchen timer, press "**STOP/CANCEL**" can cancel the kitchen timer and the oven go back to waiting state.

8. Auto Menu

- 1) Turn " " right to choose the menu, and "A-1" to "A-12" will display.
- 2) Press "**START/+30SEC.**" to confirm.
- 3) Turn " " to choose the default weight as the menu chart.
- 4) Press "**START/+30SEC.**" to start cooking.

Example: If you want to use "Auto Menu" to cook pasta for 100g.

- 1) Turn " " clockwise till "A-6" displays.
- 2) Press "**START/+30SEC.**" to confirm.
- 3) Turn " " to select the weight of fish till "100" display s.
- 4) Press "**START/+30SEC.**" to start cooking.

OPERATION INSTRUCTIONS

The menu chart:

Menu	Weight	Display
A-1 Reheat cup	1 cup	1
	2 cups	2
	3 cups	3
A-2 Lasagna	250 g	250 g
	500 g	500 g
A-3 Scrambled eggs	1(50g)	1
	2(100g)	2
	3(150g)	3
A-4 Baked potatoes	1	1
	2	2
	3	3
A-5 Crostini	80 g	80
A-6 Pasta	50 g(with 450g water)	50 g
	100 g(with 800g water)	100 g
	150 g(with 1200g water)	150 g
A-7 Grilled Pizza	200 g	200 g
	400 g	400 g
A-8 Baked Bacon	1 slice	1
	2 slices	2
	3 slices	3
	4 slices	4
	5 slices	5
	6 slices	6
A-9 Grilled Vegetables	500 g	500 g
A-10 Reheat vegetable soup	1 cup	1
	2 cups	2
	3 cups	3
A-11 Grilled salmon	300 g	300 g
A-12 Popcorn	100 g	100 g




OPERATION INSTRUCTIONS

9. Multi-stage cooking

At most 2 sections can be set for cooking. In multi-stage cooking, if one section is defrosting, then defrosting shall be placed in the first section automatically.

Note: Kitchen timer and auto menu cannot work in multi-stage cooking. Quick start can be set as one of sections in multi-stage cooking.

Example: If you want to defrost food for 5 minutes and then cook with 80% microwave power for 7 minutes, operate it as the following:

- 1) Press "**DEFROST**" twice, and the oven will display "240w" and "00:00" will flash.
- 2) Turn "  " to select the defrost time till "5:00" displays.
- 3) Press "**MICROWAVE**" once, the screen displays "800w".
- 4) Press "**MICROWAVE**" once again or turn "  " to choose 80% microwave power.
- 5) Press "**START/+30SEC.**" to confirm, and the screen displays "600w".
- 6) Turn "  " to adjust the cooking time till the oven displays "7:00".
- 7) Press "**START/+30SEC.**" to start cooking, and buzzer will sound once for the first section, defrosting time counts down. Buzzer will sound once again entering the second cooking. When cooking finishes, buzzer sounds five times.

10. Inquiring Function

In cooking state, press "**CLOCK/KITCHEN TIMER**" to inquire the time and the time will display for 3 seconds.

 
11. Lock-out Function for Children

Lock: In waiting state, press "**STOP/CANCEL**" for 3 seconds, there will be a long beep denoting entering the children-lock state. The lock indicator will light and current time will display if the time has been set.

Lock quitting: In locked state, press "**STOP/CANCEL**" for 3 seconds, there will be a long "beep" denoting that the lock is released.

OPERATION INSTRUCTIONS

12. Turntable Reset Function

When cooking finished, if the turntable is not at the initial position, it will enter the turntable reset function. At this time, the lamp, fan and turntable are working, "  " will dynamic display. After the turntable has reset, the screen will display " End" to remind cooking is finished.

Note:

1. This function only works for one completed cooking. If pause or open the oven door during cooking, the current cooking cannot enter the turntable reset function.
2. Under the reset state, opening the door or " **STOP/CANCEL** " button is pressed, the oven will go back to waiting state.
3. Position Precision: cooking time in 5 minutes and turntable degrees within the range of minus 30 degrees to 30 degrees.

TROUBLE SHOOTING

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

ONE YEAR LIMITED WARRANTY

This product carries a warranty stating that it will be free from defects in material and workmanship for a period of one year from the date of purchase. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep your original sales receipt.

IMPORTANT:

1. This warranty does not cover damages resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. (Read directions carefully.)
2. This warranty is void if this product is ever used for other than private household purposes.
3. This warranty is void if this product is ever used outside of the UK.

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials.

If additional assistance is needed, please contact customer assistance at:

customerservice@uk.toshiba-lifestyle.com

Midea Home Appliances UK Ltd.

5 New Street Square, London EC4A 3TW

Midea Home Appliances UK Ltd . expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance.

Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference

Model Number: _____

Serial Number: _____

SAVE THIS FOR YOUR RECORDS

Made in China

TOSHIBA

customerservice@uk.toshiba-lifestyle.com

Midea Home Appliances UK Ltd.

5 New Street Square, London EC4A 3TW